
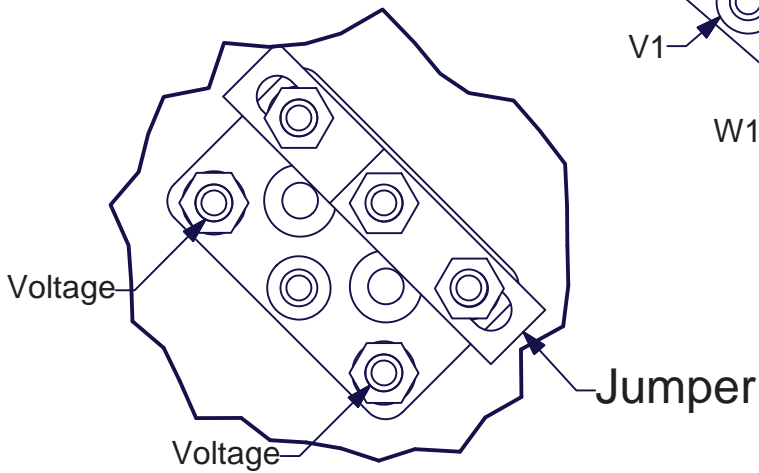



**Attention:**

All ATEX motors are supplied with a PTO thermal protection device (internal bi-metallic switch).


The PTO does not interrupt power to the motor when it trips. A contactor must be used in conjunction with the PTO to protect the motor from overheating. Failure to connect the PTO properly to a contactor can result in motor failure.

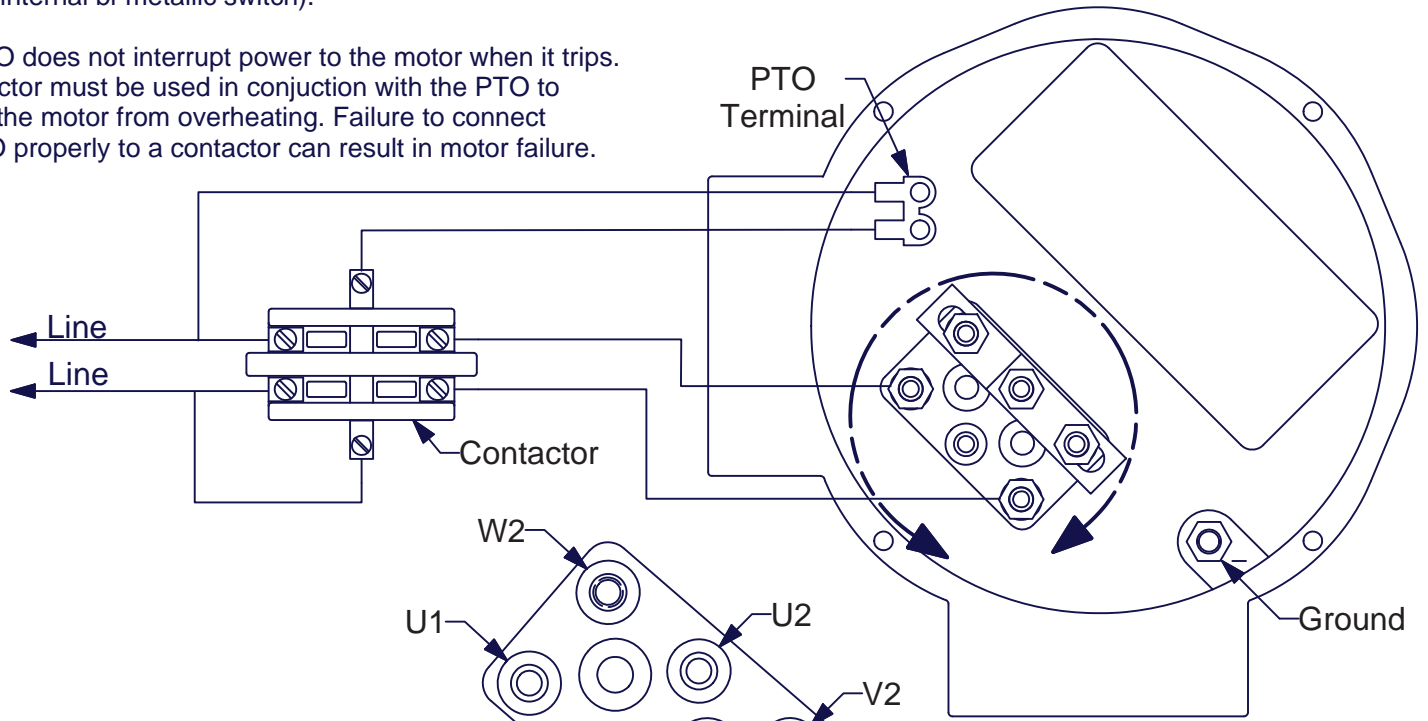


**230v 1 Phase**

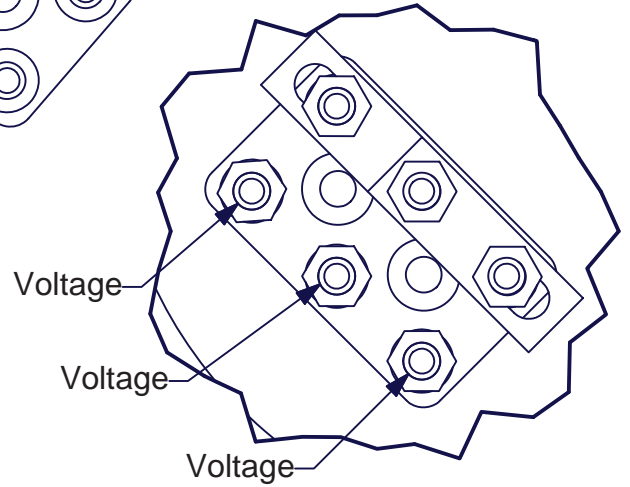

**230v 3 Phase**

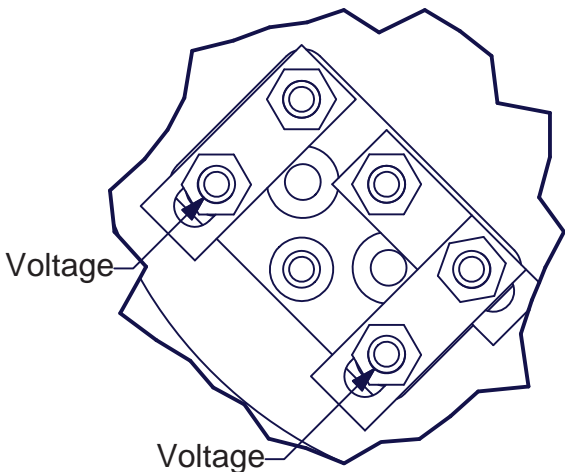

**115v 1 Phase**

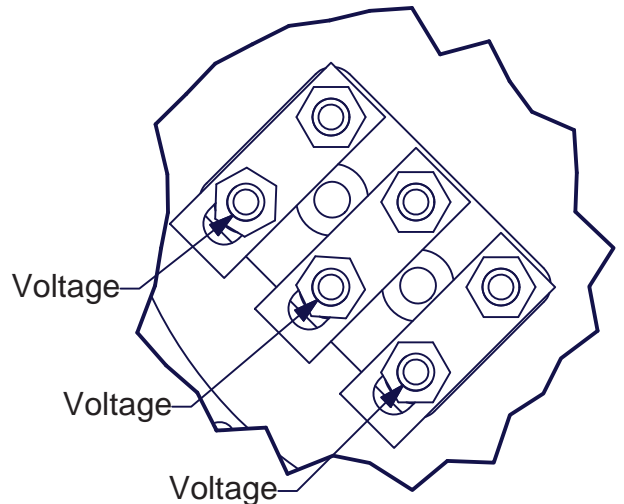

**400v 3 Phase**